

How to Display Firmware Version on APX Portable Display Radio

To place your APX in Service or Test Mode

Power on the radio and in less than 3 secs,
press the side bottom button 5x rapidly,

the APX should go into service mode.

The APX will now display service and test information
in successive screens in a timed interval.

www.northgeorgiacommunications.com

To exit the service and test mode,

power down the APX,
and on the next power up,

the APX will return to normal operation.

Please contact the author Ken Bryant with any thoughts, comments, suggestions and improvements.

706-896-0000

email@kenbryant.net

www.NorthGeorgiaCommunications.com | www.MyRadioDealer.com

Copyright © 2005-2023 All Rights Reserved